




art. CL 790 SUZUKI VZ 800 Marauder '97

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
INSTRUCTIONS DE MONTAGE

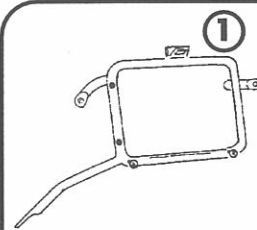

**SUPPORTO
LATERALE
SIDE SUPPORT
SUPPORT LATERAL**

Q.TY n.2

2



RONDELLA Ø 8 X 21
WASHER Ø 8 X 21
RONDELLE Ø 8 X 21

Q.TY n.2

3



DISTANZIALE Ø 22X6
COLLAR DISTANCE
Ø 22 X 6
COLLIER DE
SEPARATION Ø 22 X 6


Q.TY n.2

4




VITE TBEI M 8 X 50
SCREW M 8 X 50
VIS M 8 X 50

Q.TY n.4

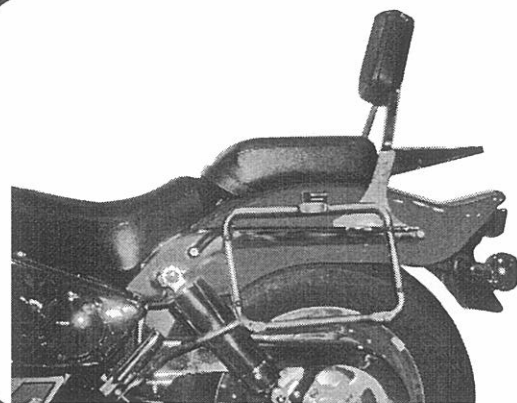

A

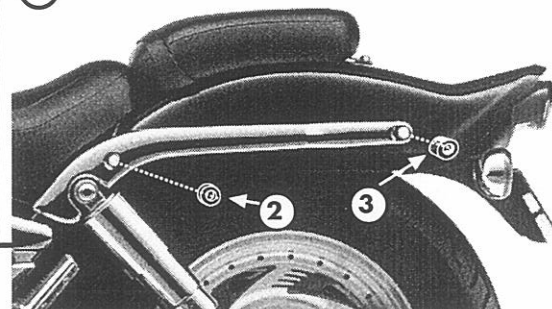

5



ESAGONO SPECIALE
Ø 14 X 10
SPECIAL NUT
Ø 14 X 10
ECROU SPECIAL
Ø 14 X 10

Q.TY n.2

6



RONDELLA Ø 8
WASHER Ø 8
RONDELLE Ø 8

Q.TY n.2

7



DADO M 8
ECROU M 8
NUT M 8

Q.TY n.2


8



VITE TBEI M 8 X 20
SCREW M 8 X 20
VIS M 8 X 20

Q.TY n.2

B

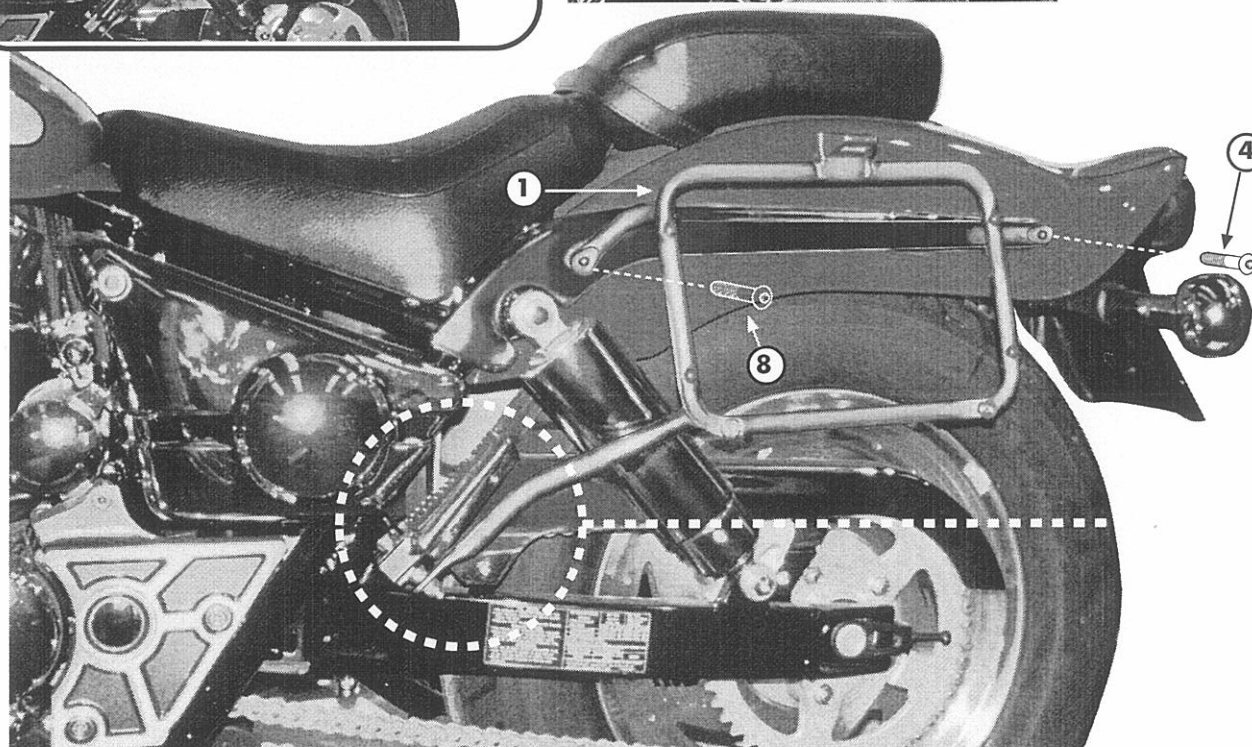

C

